



Upgrade guide



1. You need to prepare a RS485 to USB upgrade cable, as show in the following picture. Use this cable to connect battery`s comm port and computer`s USB port and then setting DIP switch is 1 on.

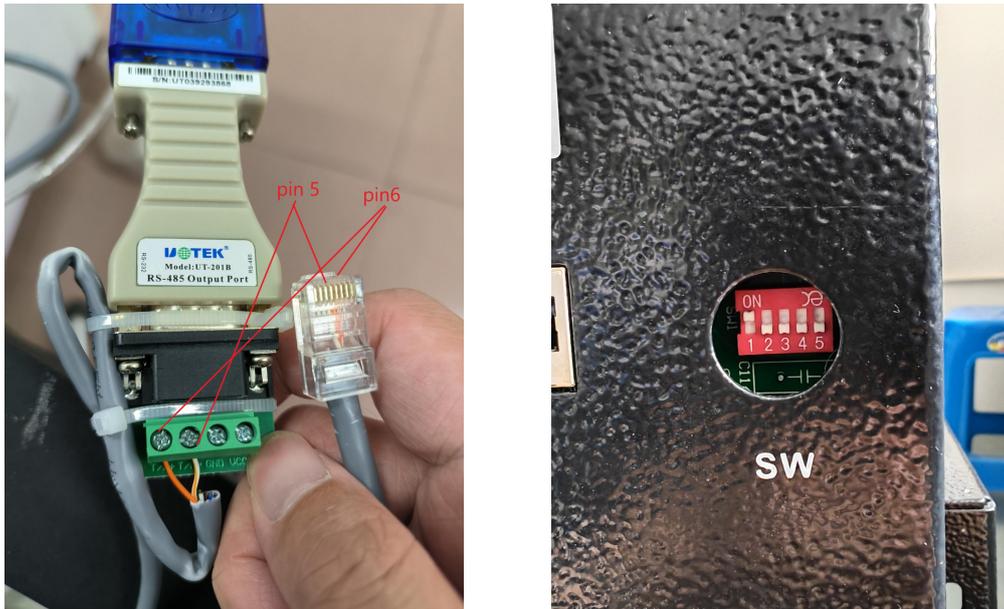

2. Run the software as an administrator, then click this button.

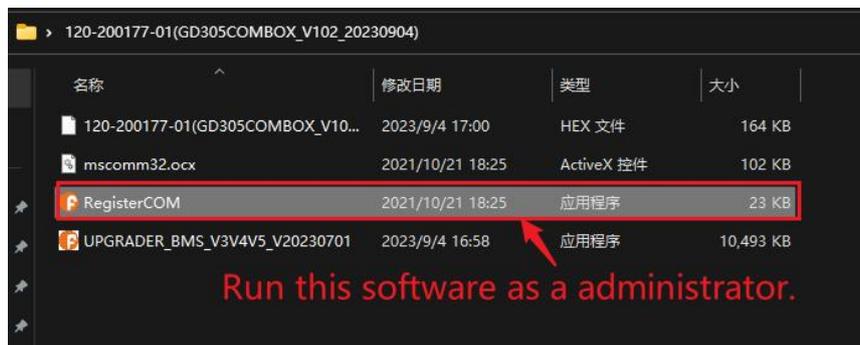

3. Double click to open this software select address is 01 and then select upgrade file.

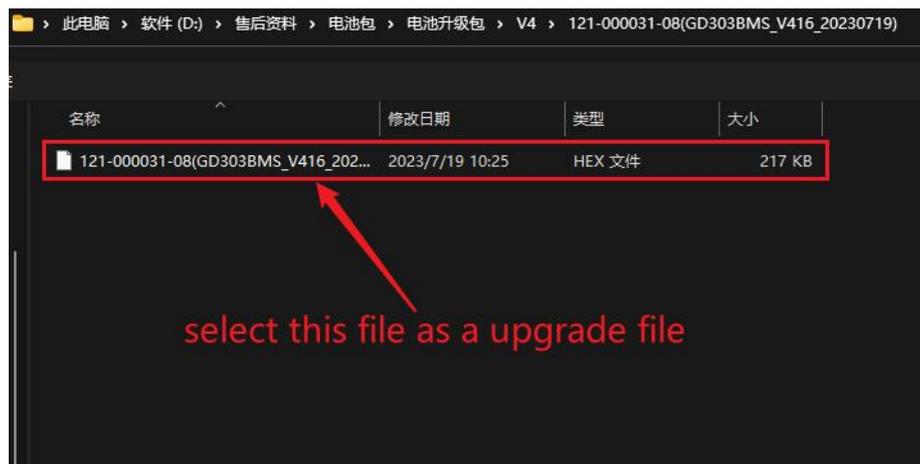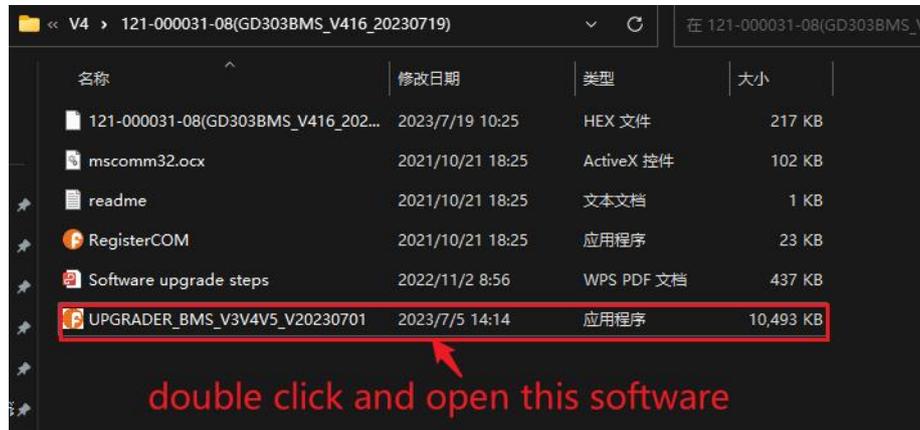

4. Click start button and it will upgrade.

